

EX-91100 Display Monitor User Manual

Release Date

Revision

April 2005

V0.1

May 2007

V0.2

©2005

All Rights Reserved.

Published in Taiwan

Warning!

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference

Electric Shock Hazard – Do not operate the workstation with its back cover removed. There are dangerous high voltages inside.

Disclaimer

This information in this document is subject to change without notice.

Table of Contents

Warning!.....	2
Disclaimer.....	2

Chapter 1

Getting Started

1.1 Features.....	4
1.2 Specifications.....	4
1.3 Dimensions.....	6
1.4 Brief Description.....	7
1.5 Display Mode.....	8

Chapter 2

OSD

2.1 Front Panel Controls.....	9
2.2 OSD Controls.....	9
2.3 Main Menu.....	10
2.4 AD Board (TB-6020) OSD Functions.....	12

Figures

Figure 1.1: Dimensions of EX-91100.....	6
Figure 1.4: Front View.....	7
Figure 1.5: Rear View.....	8

Appendix

Panelmounting.....	13
--------------------	----

Chapter 1

1.1 Features

- 10.4" SVGA color TFT LCD display
- Heavy-duty steel chassis
- Plastic front panel is IP65-certified.
- OSD on the rear side
- Analog RGB signal direct input offering multi-scan function

1.2 Specifications

Display

- Display: 10.4" SVGA color TFT LCD display
- Maximum resolution: 800 x 600
- Maximum colors: 256K
- Dot size (mm): 0.264 x 0.264
- Luminance: 250 cd/m²
- Viewing angle: 130°(H), 110°(V)
- Backlight life: 50,000 hours
- OSD control: Yes
- Touch screen: analog resistive
- OS compatibility: Win 95/98, XP, 2000, NT4.0, QNX, Linux
- Power Supply: 12V DC @0.9A

Mechanical

- Construction: heavy-duty steel chassis
- IP65-certified plastic front panel
- Mounting: panel mount
- Input signal: analog RGB
- OSD on the rear side
- Dimensions: 317(W) x 243(H) x 43.5mm (D)
- Cutout Dimensions: 303(W) x 229mm (H)
- Gross Weight: 4.2kg

Environmental

Operating temperature: 0 to 45 (32 to 113)
Storage temperature: -20 to 60 (-4 to 140)
Relative humidity: 10 to 95% @40 , non-condensing
Vibration: 1G peak, 10~150Hz
Shock: 30G peak acceleration (11 msec.duration)
EMC: CE, FCC Class A

Ordering Information

EX-91100 10.4" industrial display monitor (plastic bezel)
EX-91100T 10.4" industrial display monitor with sealed touch screen (plastic bezel)

1.3 Dimensions

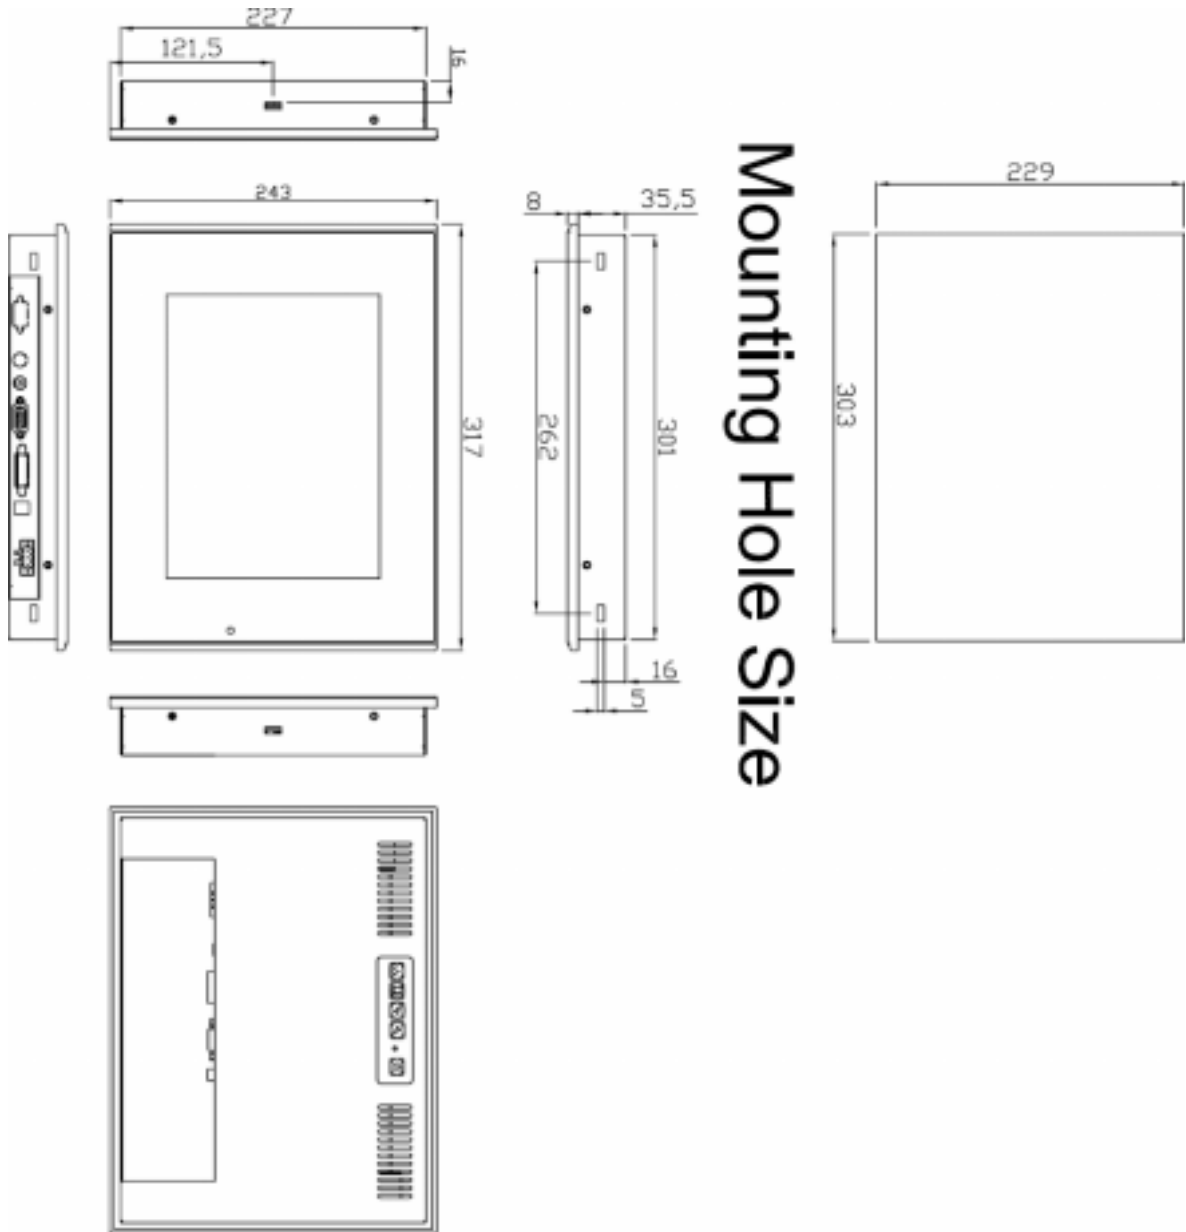


Figure 1.1: Dimensions of the EX-91100

1.4 Brief Description of the EX-91100

The EX-91100 features an excellent viewing ability for monitoring and control applications. It is available with resistive touch screen that is easy to use and maintain.

The front panel of the display monitor is sealed with gasket for NEMA 4/IP 65 rating when it is panel-mounted in a NEMA rated cabinet or enclosure.



Figure 1.2: Front View of the EX-91100




Figure 1.3: Rear View of EX-91100


1.5 Display Mode

Display Mode		Hori. Sync (KHz)	Vert. Sync. (Hz)
VGA 640 x 480		31	60
		38	72
		38	75
SVGA 800 x 600		35	56
		38	60
		48	72
		47	75
XGA 1024 x 768		48	60
		56	70
		60	75
SXGA	1152 x 864	68	75
	1280 x 1024	64	60
		80	75

Chapter 2


2.1 Front Panel Controls

 Power switch: To turn ON or OFF the power

 Shift the icon to the right side or shift it up










 Shift the icon to the left side or shift it down

 Menu: To enter OSD menu for related icon and item.

 Auto Button: One-touch auto adjustment

2.2 OSD Controls

To make any adjustment, select the following:

1. Press  (Menu) to show the OSD menu or disable the OSD menu.
2. Select the icon that you wish to adjust with the (/ or +/-) key in the menu.
3. Press  (Menu) and then choose the item with the (/ or +/-) key.
4. Press  (Menu) and then adjust the quality with the (/ or +/-) key.

2.3 Main Menu



In the **Main** menu, there are the following items:

- Color
- Image Setting
- Position
- OSD Menu
- Language
- Misc.
- Exit



For **Color**, check out the following:

- Contrast
- Brightness
- Color Adjust
- Color Temp
- Back



For **Image setting**, check out the following:

- Clock
- Phase
- Gamma
- Sharpness
- Back



In the **Position**, there are the following:

- H. Position
- V. Position
- Back



In the **OSD** menu, there are:

- OSD H. Pos.
- OSD V. Pos.
- OSD Timer
- Back



In the **Language** menu, there are:

- English
- Frances
- Germany
- Spanish
- Traditional Chinese
- Simplified Chinese
- Japanese





In the **Misc** menu, there are:



- Signal Source
 - Select VGA: Analogue VGA Input
 - Select DVI: Digital DVI-D Input
 - Select AV: Composite Video Input
 - Select SV: S-Video Video Input
- Reset
- Back

2.4 AD Board (TB-6020) OSD Functions





1.) Getting into Burn-in Mode


Before setting into a burn-in mode, first disconnect the AC power cord. Then press (don't let them go) the   buttons until the AC power cord is connected and the "RGB" appears on the top left corner of your screen. Now it can be put into the burn-in mode for changing colors.

2.) Getting Out of Burn-in Mode

Before getting out of the burn-in mode, please first disconnect the AC power cord. Then press the  button (If not workable, press the  button and don't let them go) until the AC power cord is connected. Please don't let your fingers go until the AC power cord is connected again and the wording of "RGB" appears on the top left corner of your screen, and wait for 3 second. Under the non-signal entry situation, if **Cable Not Connected** is seen, exit is thus successfully made.

When the Burn-in Mode is Unable to Eradicate...

- 1.) If the "RGB" is still on the top left corner of the screen, press  to enter "Miscellaneous" and choose "Reset", and then **Yes**, and press . When the screen goes black, disconnect power and repeat the above steps.
- 2.) If the "RGB" is not found, disconnect the AC power cord first. Then press the   buttons (don't let them go) until the AC power cord is connected, and wait for 2 to 3 seconds. When "RGB" appears, repeat the above steps.
- 3.) Functions of OSD Keys

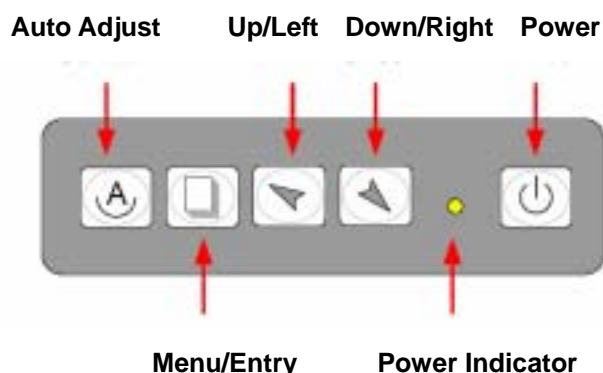

Appendix

Panel Mounting

The EX-91100 display monitor is designed to be panel-mounted as shown in Figure A. Just carefully place the unit through the hole and tighten the given 8 screws from the rear to secure the mounting.

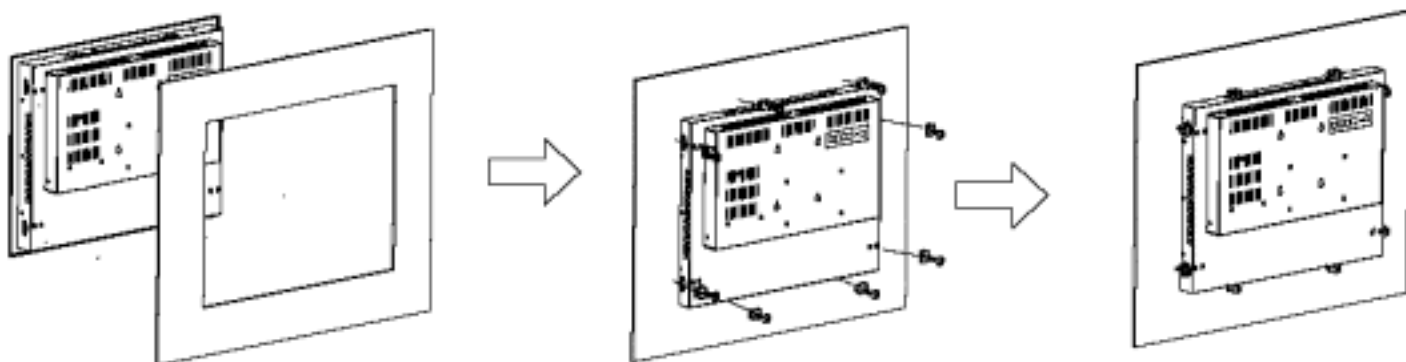


Figure A: Panelmounting of the EX91100